

# ABB



## COPYSTICK User Guide

## COPYSTICK

*For fast and accurate repeat drive programming*

### Compatibility:

This Option is suitable for use on the following product range:  
ACS250 & ACS255 Drives

### Note:

Parameters can only be copied between drives of the same product range and power rating (size).

**Part No.** 3AUA0000135608  
**Model No.** RCCS-01  
**Document No.** 3AXD10000706810  
**Literature Fulfilment number.** ACS255-PNMU01U-EN\_REVA

**ABB Oy**  
AC Drives  
P.O. Box 184  
FI-00381 HELSINKI  
FINLAND  
[www.abb.com/drives](http://www.abb.com/drives)

82-STICK-ABB\_V2



### Drive display message to show the status for certain operation

- PASS-r** : COPYSTICK read / stored the drive parameters successfully.
- DS-Loc** : COPYSTICK is locked; attempting to read parameter from the drive with COPYSTICK lock switch on.
- FA iL-r** : COPYSTICK failed to read parameter from the drive.
- PASS-t** : COPYSTICK transferred parameters to the drive (write parameters to drive) successfully.
- FA iL-P** : The power rating of the parameters saved in the COPYSTICK does not match the power-rating of the drive to be programmed.
- FA iL-t** : COPYSTICK failed to transfer parameter set to drive.
- no-dAt** : No parameter data saved in the COPYSTICK.
- dr-Loc** : Drive parameters have been locked and cannot accept new parameter settings. Unlock drive parameter set.
- dr-rUn** : Drive is running and cannot accept new parameter settings. Stop drive operation before programming.
- tYPE-E** : Parameters for Drive type saved in COPYSTICK do not match the drive type to be programmed (write operation only).
- tYPE-F** : COPYSTICK currently doesn't support the drive type to be programmed.

# ABB



## COPYSTICK User Guide

## COPYSTICK

*For fast and accurate repeat drive programming*

### Compatibility:

This Option is suitable for use on the following product range:  
ACS250 & ACS255 Drives

### Note:

Parameters can only be copied between drives of the same product range and power rating (size).

**Part No.** 3AUA0000135608  
**Model No.** RCCS-01  
**Document No.** 3AXD10000706810  
**Literature Fulfilment number.** ACS255-PNMU01U-EN\_REVA

**ABB Oy**  
AC Drives  
P.O. Box 184  
FI-00381 HELSINKI  
FINLAND  
[www.abb.com/drives](http://www.abb.com/drives)

82-STICK-ABB\_V2



### Drive display message to show the status for certain operation

- PASS-r** : COPYSTICK read / stored the drive parameters successfully.
- DS-Loc** : COPYSTICK is locked; attempting to read parameter from the drive with COPYSTICK lock switch on.
- FA iL-r** : COPYSTICK failed to read parameter from the drive.
- PASS-t** : COPYSTICK transferred parameters to the drive (write parameters to drive) successfully.
- FA iL-P** : The power rating of the parameters saved in the COPYSTICK does not match the power-rating of the drive to be programmed.
- FA iL-t** : COPYSTICK failed to transfer parameter set to drive.
- no-dAt** : No parameter data saved in the COPYSTICK.
- dr-Loc** : Drive parameters have been locked and cannot accept new parameter settings. Unlock drive parameter set.
- dr-rUn** : Drive is running and cannot accept new parameter settings. Stop drive operation before programming.
- tYPE-E** : Parameters for Drive type saved in COPYSTICK do not match the drive type to be programmed (write operation only).
- tYPE-F** : COPYSTICK currently doesn't support the drive type to be programmed.

**Parameter Read Button**

Copy Parameters from Drive to COPYSTICK

**Parameter Write Button**

Copy Parameters from COPYSTICK to Drive

**Locking Switch**

Locks COPYSTICK parameter set so it cannot be over-written (Copy Parameter function disabled).

**COPYSTICK Interface**

Connects to RJ45 socket on drive (see product manual for further information).

**Status LED**

**Green:**

- Constant on: Power ok and found drive
- Fast Flash: Parameter Read/Write in progress
- Slow Flash: COPYSTICK in a drive network
- Slow blink: No drive has been found

82-STICK-ABB\_V2



**Parameter Read Button**

Copy Parameters from Drive to COPYSTICK

**Parameter Write Button**

Copy Parameters from COPYSTICK to Drive

**Locking Switch**

Locks COPYSTICK parameter set so it cannot be over-written (Copy Parameter function disabled).

**COPYSTICK Interface**

Connects to RJ45 socket on drive (see product manual for further information).

**Status LED**

**Green:**

- Constant on: Power ok and found drive
- Fast Flash: Parameter Read/Write in progress
- Slow Flash: COPYSTICK in a drive network
- Slow blink: No drive has been found

82-STICK-ABB\_V2

